


**SEARS**

**OWNER'S  
MANUAL**

**MODEL NO.  
944.524602**

**Caution:**  
Read and follow  
all Safety Rules  
and Instructions  
Before Operating  
This Equipment

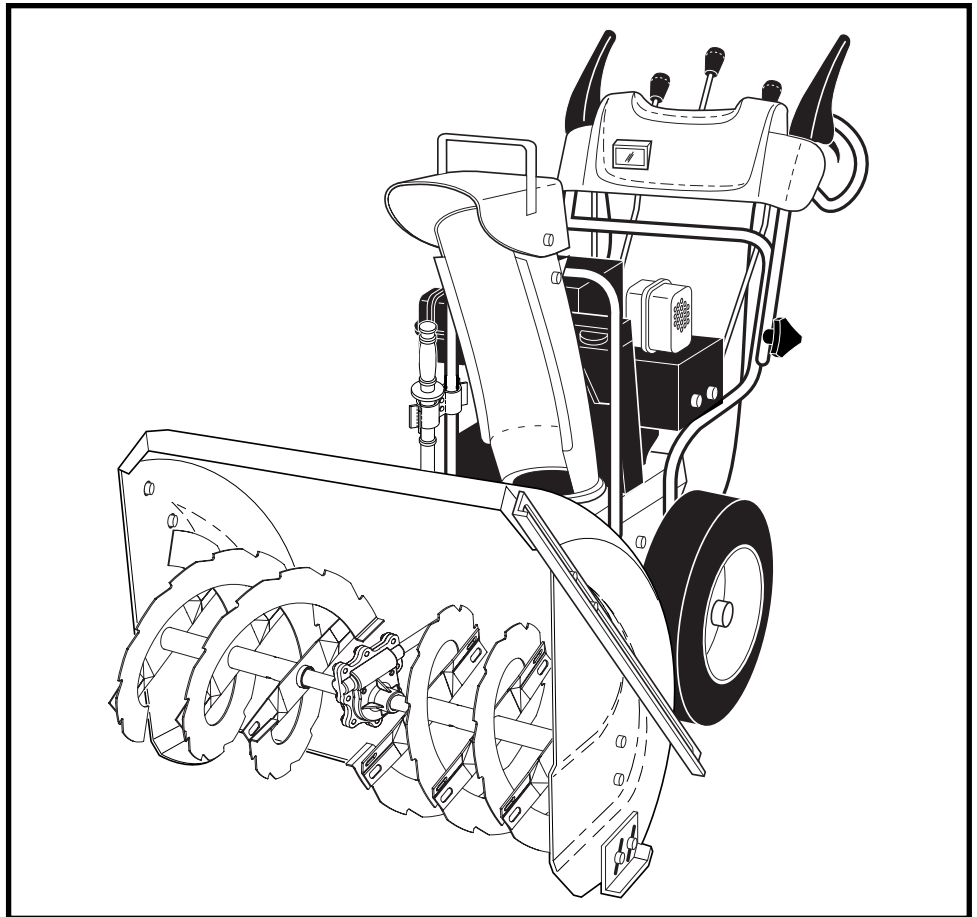

**CRAFTSMAN®**


**11.5 HP  
30" TWO-STAGE  
POWER-PROPELLED  
SNOW THROWER**

- Assembly
- Operation
- Maintenance
- Service and Adjustments
- Repair Parts

# REPAIR PARTS

# SNOW THROWER - - MODEL NUMBER 944.524602

## AUGER HOUSING / IMPELLER ASSEMBLY

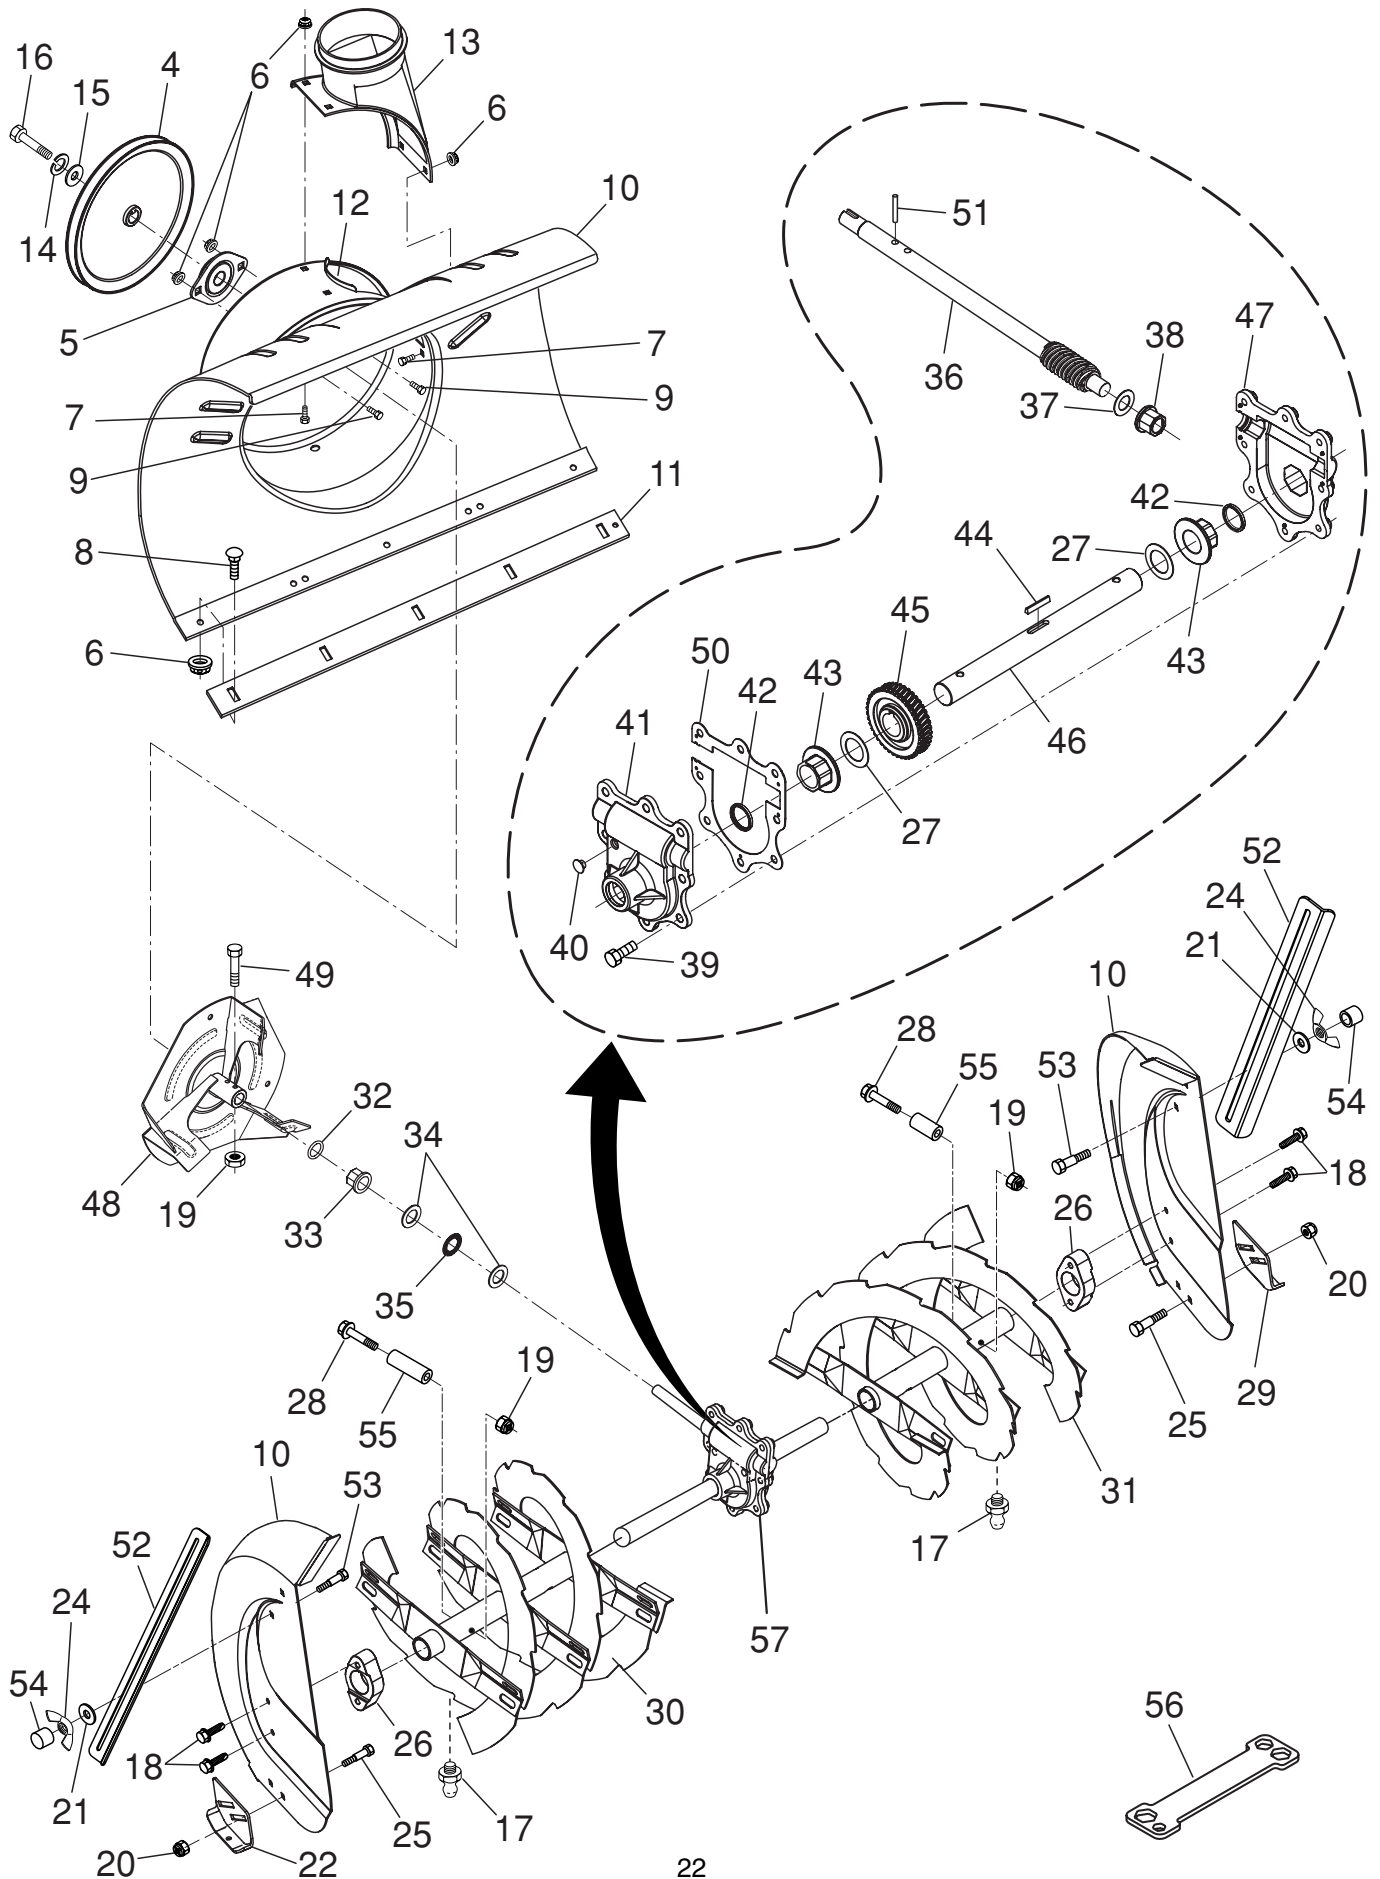

# REPAIR PARTS

# SNOW THROWER - - MODEL NUMBER 944.524602

## AUGER HOUSING / IMPELLER ASSEMBLY

KEY NO.	PART NO.	DESCRIPTION
4	191079	Pulley, Impeller
5	188909	Bearing Assembly, Flange
6	198541	Nut, Hex Flange 5/16-18
7	180355	Bolt, Flat Head, Carriage 5/16-18 x 5/8
8	72250505	Bolt, Carriage 5/16-18
9	199879	Bolt, Hex Head
10	404927X615	Housing, Auger
11	404933X479	Bar, Scraper
12	178675X008	Bracket, Corner Discharge
13	175322	Base, Discharge Chute
14	10040500	Washer, Lock 5/16
15	19111507	Washer, Flat
16	74950512	Screw, Hex Head 5/16-18 x 3/4
17	405637	Fitting, Grease
18	179582	Screw, Hex Head 5/16 x 1
19	73800400	Nut, Hex Lock 1/4-20
20	198541	Nut, Hex Lock 5/16-18
21	401347	Washer, Flat 5/16
22	178777X479	Skid Plate, RH
25	72270506	Bolt, Carriage 5/16-18 x 3/4
26	174658	Bearing, Auger
27	174697	Washer, Thrust, 1"
28	198636	Bolt, Shear
29	174762X479	Skid Plate, LH
30	405973X479	Auger Assembly, RH
31	405972X479	Auger Assembly, LH
32	407768	O-Ring
33	407769	Bushing, Flange 3/4
34	174681	Washer, Thrust 3/4
35	174684	Bearing, Thrust 3/4
36	407757	Shaft, Impeller
37	174683	Washer, Thrust 5/8
38	407758	Bushing, Flange 5/8
39	407767	Screw, Hex Head 5/16-18 x 3/4
40	407760	Plug, Case
41	407761	Housing, Gearbox, RH
42	407770	Seal, Oil
43	407762	Bushing, Flange, 1"
44	189282	Key, Square 1/4 x 1/4 x 7/8
45	407763	Gear, Worm
46	407764	Shaft, Auger
47	407765	Housing, Gearbox, LH
48	175321X479	Impeller Assembly
49	74780426	Screw, Hex Head 1/4-20 x 1-5/8
50	407786	Gasket, Gearbox
51	7836M	Pin, Roll 3/16 x 1-1/8
52	405697X479	Bar, Drift Cutter
53	198648	Bolt, Shoulder
54	198709	Stop
55	198638	Spacer
56	180684	Multi-Wrench
57	196710	Gearbox Assembly


**NOTE:** All component dimensions given in U.S. inches. 1 inch = 25.4 mm

**IMPORTANT:** Use only Original Equipment Manufacturer (O.E.M.) replacement parts. Failure to do so could be hazardous, damage your snow thrower and void your warranty.

# REPAIR PARTS

# SNOW THROWER - - MODEL NUMBER 944.524602

## CONTROL PANEL / DISCHARGE CHUTE

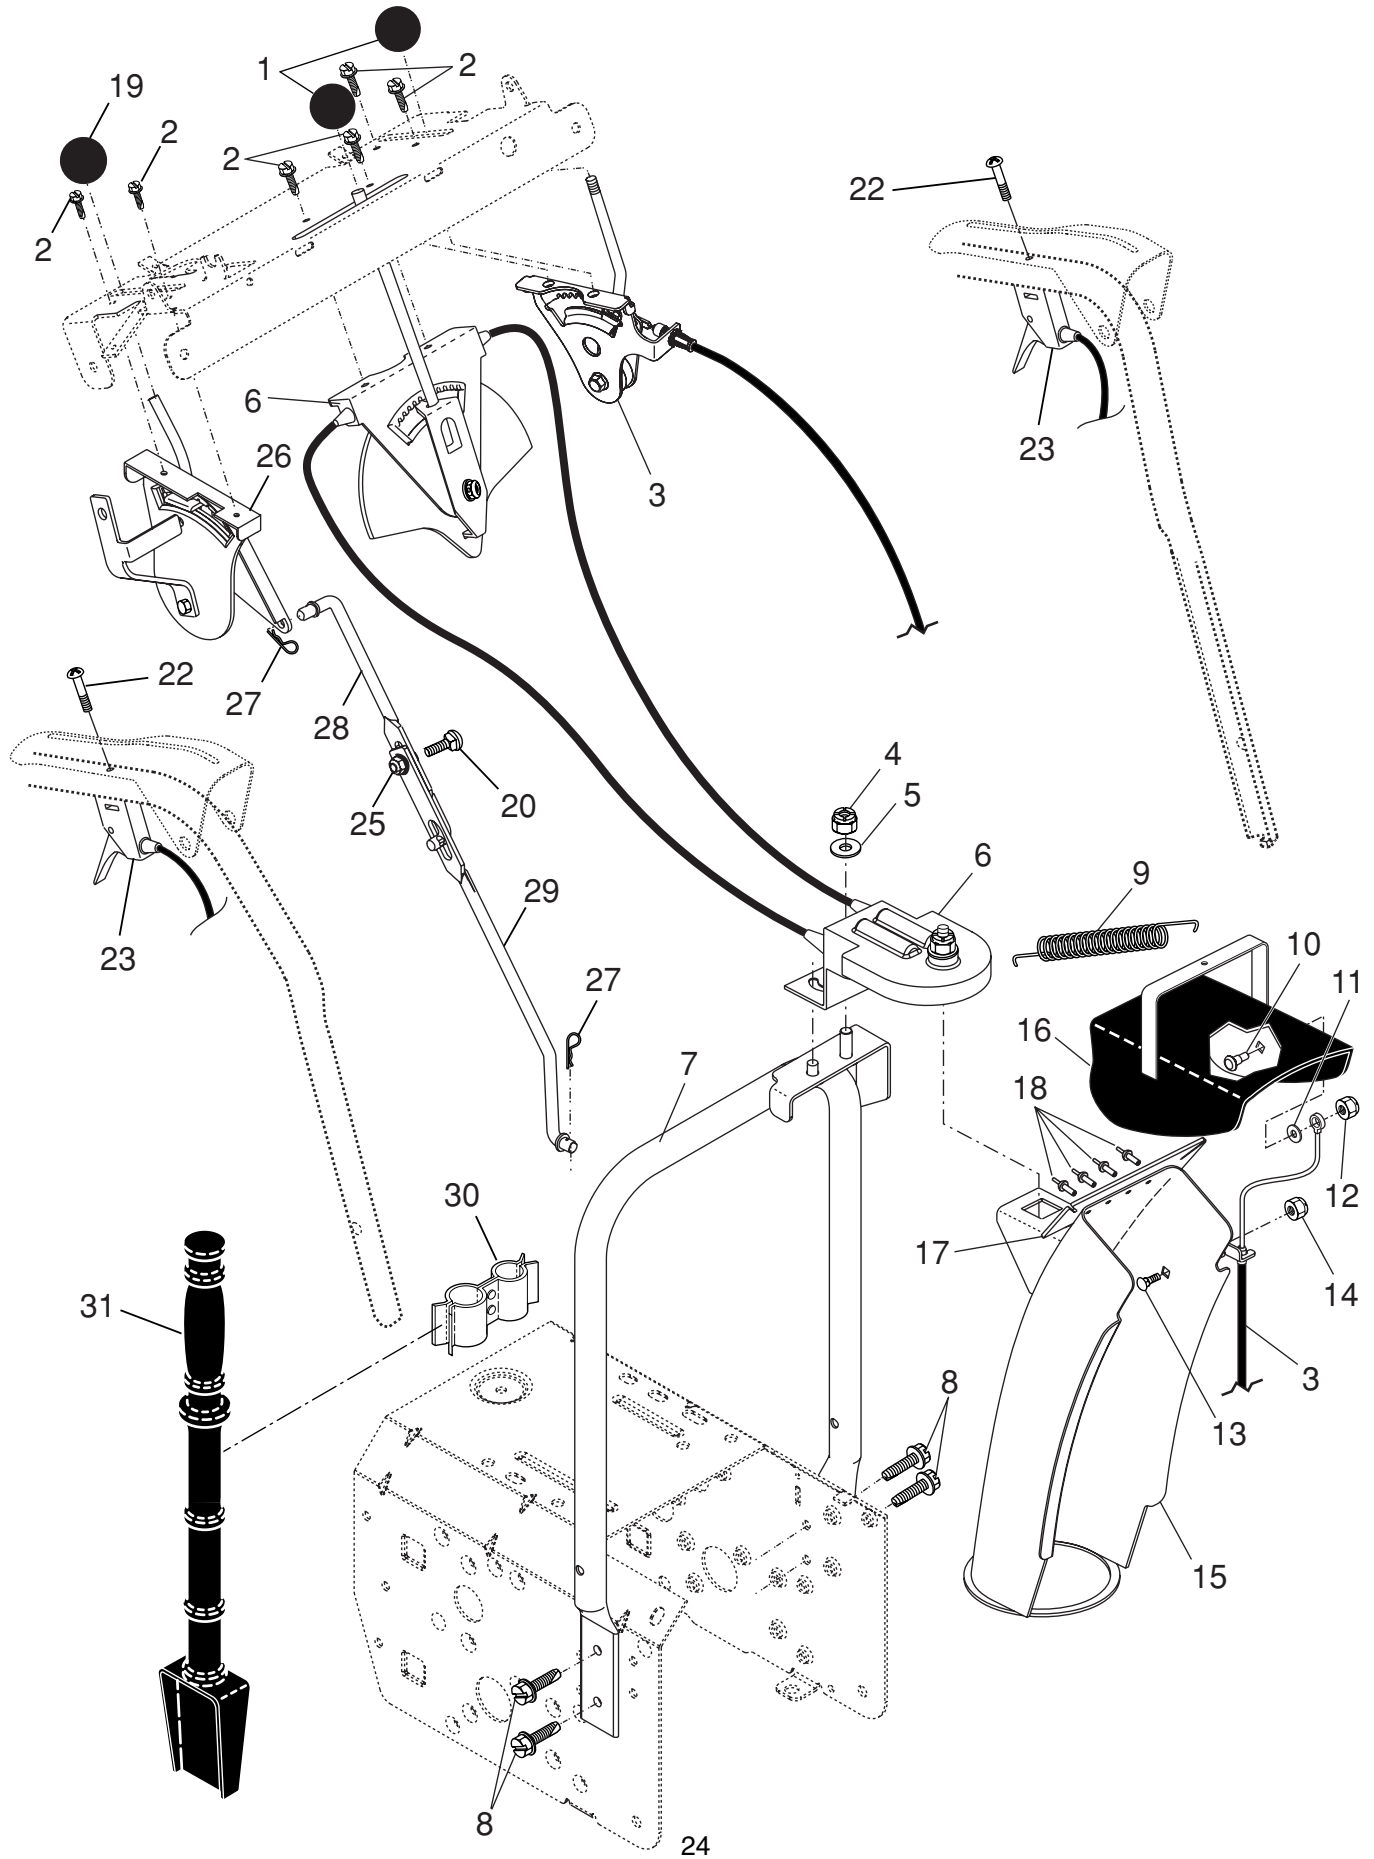

**REPAIR PARTS****SNOW THROWER - - MODEL NUMBER 944.524602****CONTROL PANEL / DISCHARGE CHUTE**


<b>KEY NO.</b>	<b>PART NO.</b>	<b>DESCRIPTION</b>
1	183334	Knob, Lever
2	17501010	Screw #10-24 x 5/8
3	198475	Control Assembly, Deflector
4	73800600	Nut, Lock 3/8-16
5	19131316	Washer, Flat 3/8
6	198473	Control Assembly, Chute Rotater
7	405784X479	Support, Pivot
8	150078	Screw, Hex Head 5/16-18 x 3/4
9	184505	Spring, Deflector
10	179829	Bolt, Shoulder
11	179246	Washer, Friction, Nylon
12	191730	Nut, Lock 1/4-20
13	72250505	Bolt, Carriage 5/16-18
14	751153	Nut, Lock 5/16-18
15	404770X615	Chute Assembly
16	178633X615	Deflector Assembly
17	179145	Seal, Deflector
18	128415	Rivet, Blind
19	183333	Knob, Speed Control Lever
20	72270506	Bolt, Carriage 5/16-18 x 3/4
22	74041024	Screw #10-24 x 1-1/2
23	188303	Control Assembly, Power Steering
25	198541	Nut, Lock 5/16-18
26	198474	Lever Assembly, Speed Control
27	169675	Retainer, Hairpin
28	180445	Rod, Upper, Speed Control
29	187716	Rod, Lower, Speed Control
30	192710	Clamp, Clean-Out Tool
31	192199	Tool, Clean-Out

**NOTE:** All component dimensions given in U.S. inches. 1 inch = 25.4 mm

**IMPORTANT:** Use only Original Equipment Manufacturer (O.E.M.) replacement parts. Failure to do so could be hazardous, damage your snow thrower and void your warranty.

# REPAIR PARTS HANDLES

# SNOW THROWER - - MODEL NUMBER 944.524602

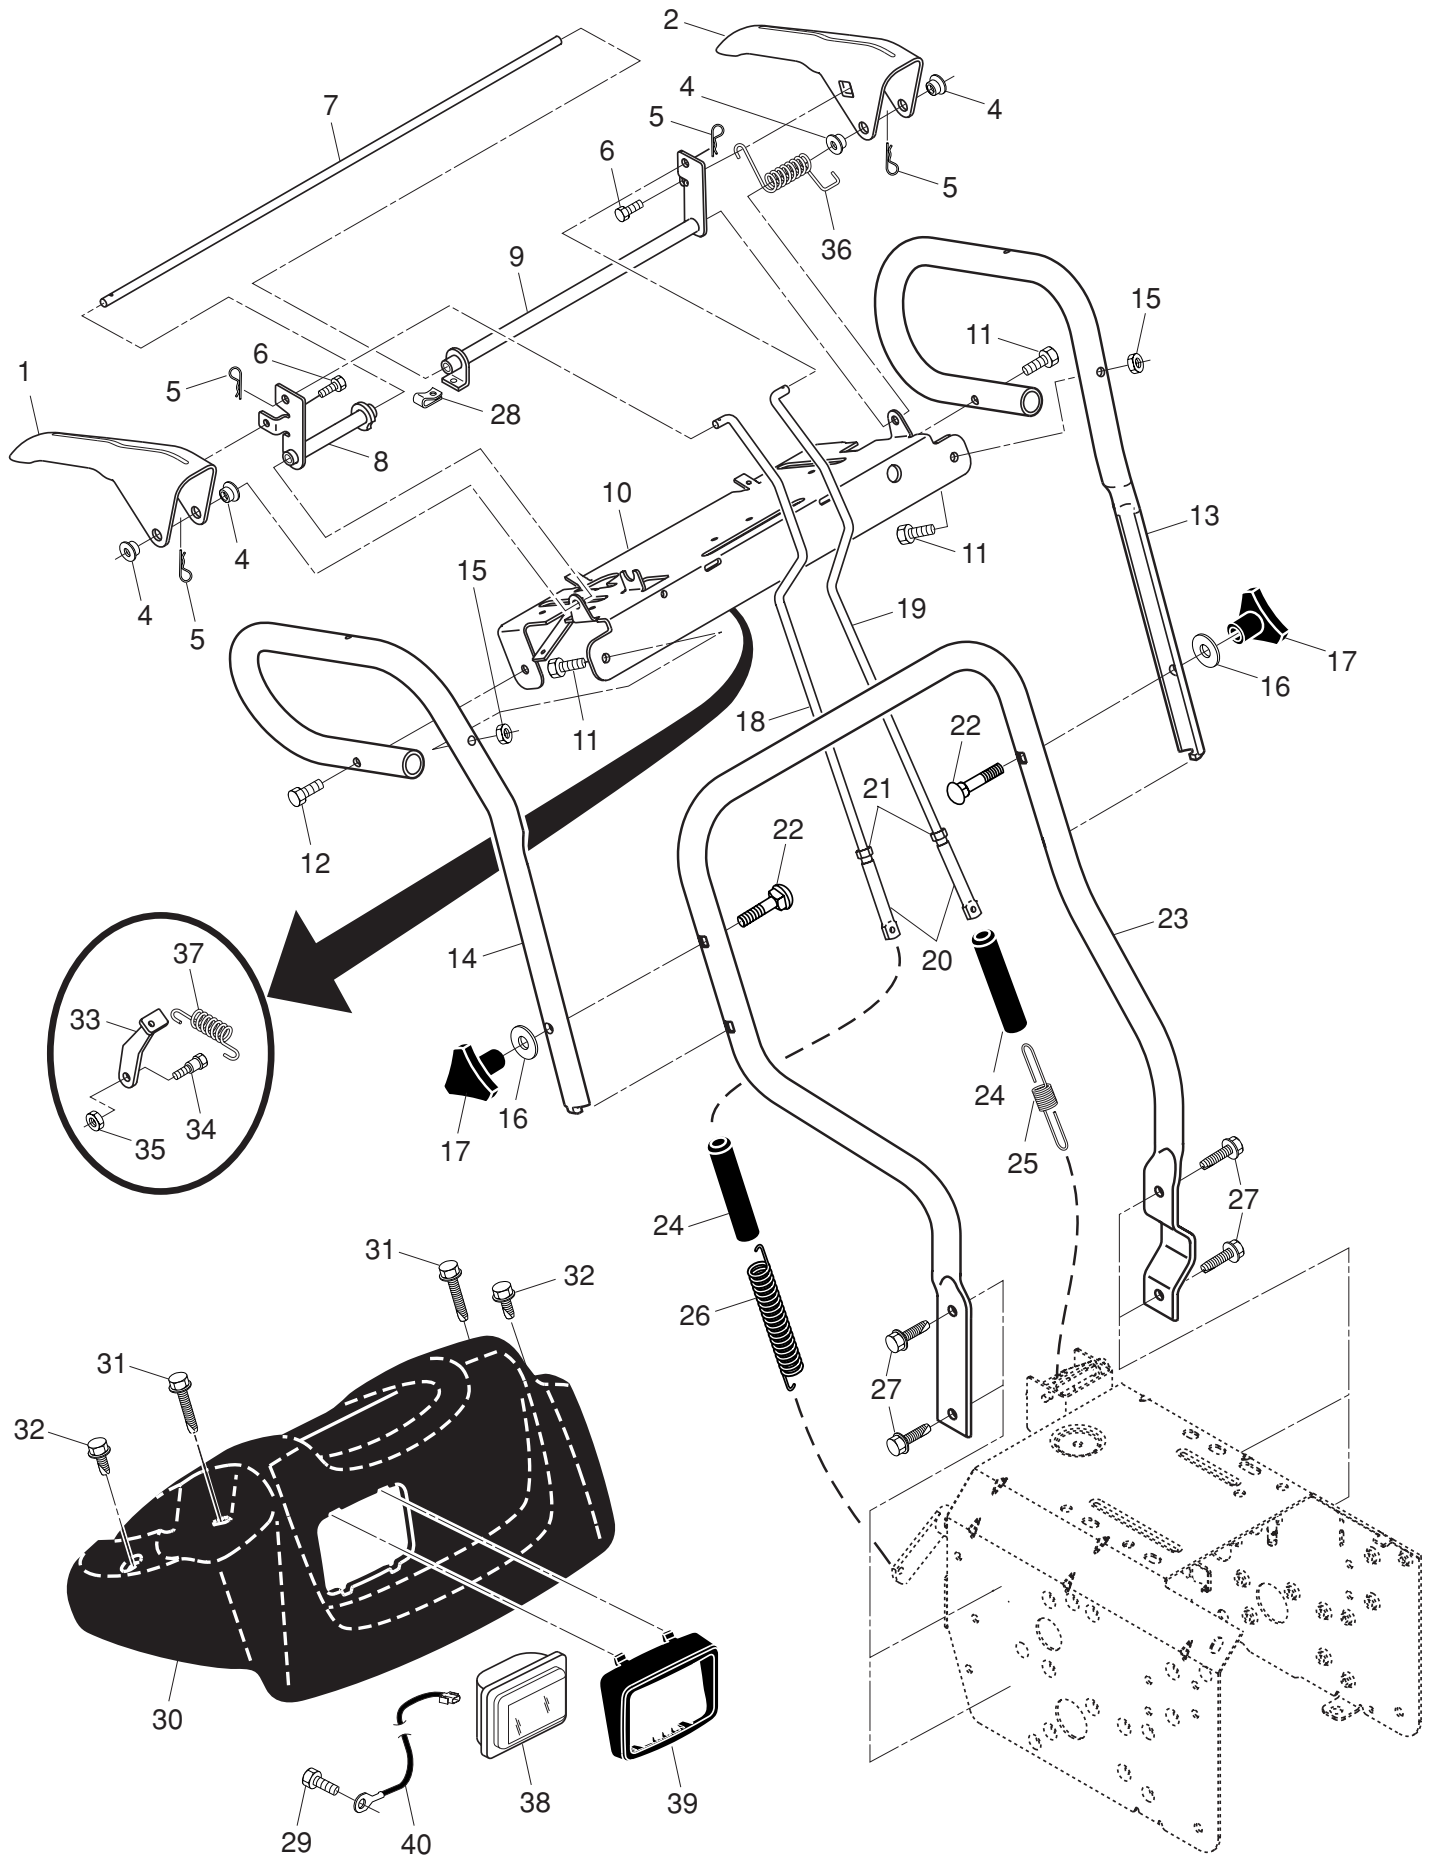

# REPAIR PARTS HANDLES

# SNOW THROWER - - MODEL NUMBER 944.524602


KEY NO.	PART NO.	DESCRIPTION
1	405783X479	Lever, Auger Control, RH
2	405999X479	Lever, Traction Drive Control, LH
4	178888	Bushing, Flange
5	169675	Retainer, Hairpin
6	17060408	Screw, Hex Head 1/4-20 x 3/4
7	178652	Rod, Interlock
8	184003	Tube Assembly, Interlock, RH
9	178651	Tube Assembly, Interlock, LH
10	178645X479	Panel, Control
11	74780524	Screw, Hex Head 5/16-18 x 1-1/2
12	74780528	Screw, Hex Head 5/16-18 x 1-3/4
13	407856X479	Handle Tube, LH
14	407857X479	Handle Tube, RH
15	751153	Nut, Lock 5/16-18
16	19131316	Washer, Flat 3/8
17	178899	Knob, Handle
18	184594	Rod, Auger Control
19	193081	Rod, Traction Control
20	180428	End, Control Rod
21	73350500	Nut, Hex, Jam 5/16-18
22	72120618	Bolt, Carriage 3/8-16 x 2-1/4
23	178643X479	Handle Tube, Lower
24	180447	Sleeve, Spring
25	180926	Spring, Traction Drive
26	178669	Spring, Auger Control
27	17000616	Screw, Hex Head 3/8-16 x 1
28	180494	Clip, Panel
29	193072	Screw, Headlight Ground Wire to Blower Housing
30	182906	Console, Panel
31	175262	Screw, Hex Head, Tapping #10-24 x 1-1/4
32	184471	Screw, Hex Head, Tapping #10-24 x 1/2
33	175399X008	Latch, Interlock
34	401369	Bolt, Shoulder
35	68038	Nut, Lock 1/4-20
36	178831	Spring, Torsion, Lever
37	178658	Spring, Interlock
38	178666	Headlight, Halogen (Includes Bulb)
--	401620	Bulb, Halogen
39	178668	Bezel, Headlight
40	180964	Harness, Headlight (Halogen)

**NOTE:** All component dimensions given in U.S. inches. 1 inch = 25.4 mm  
**IMPORTANT:** Use only Original Equipment Manufacturer (O.E.M.) replacement parts.  
 Failure to do so could be hazardous, damage your snow thrower and void your warranty.

# REPAIR PARTS

# SNOW THROWER - - MODEL NUMBER 944.524602

## DRIVE

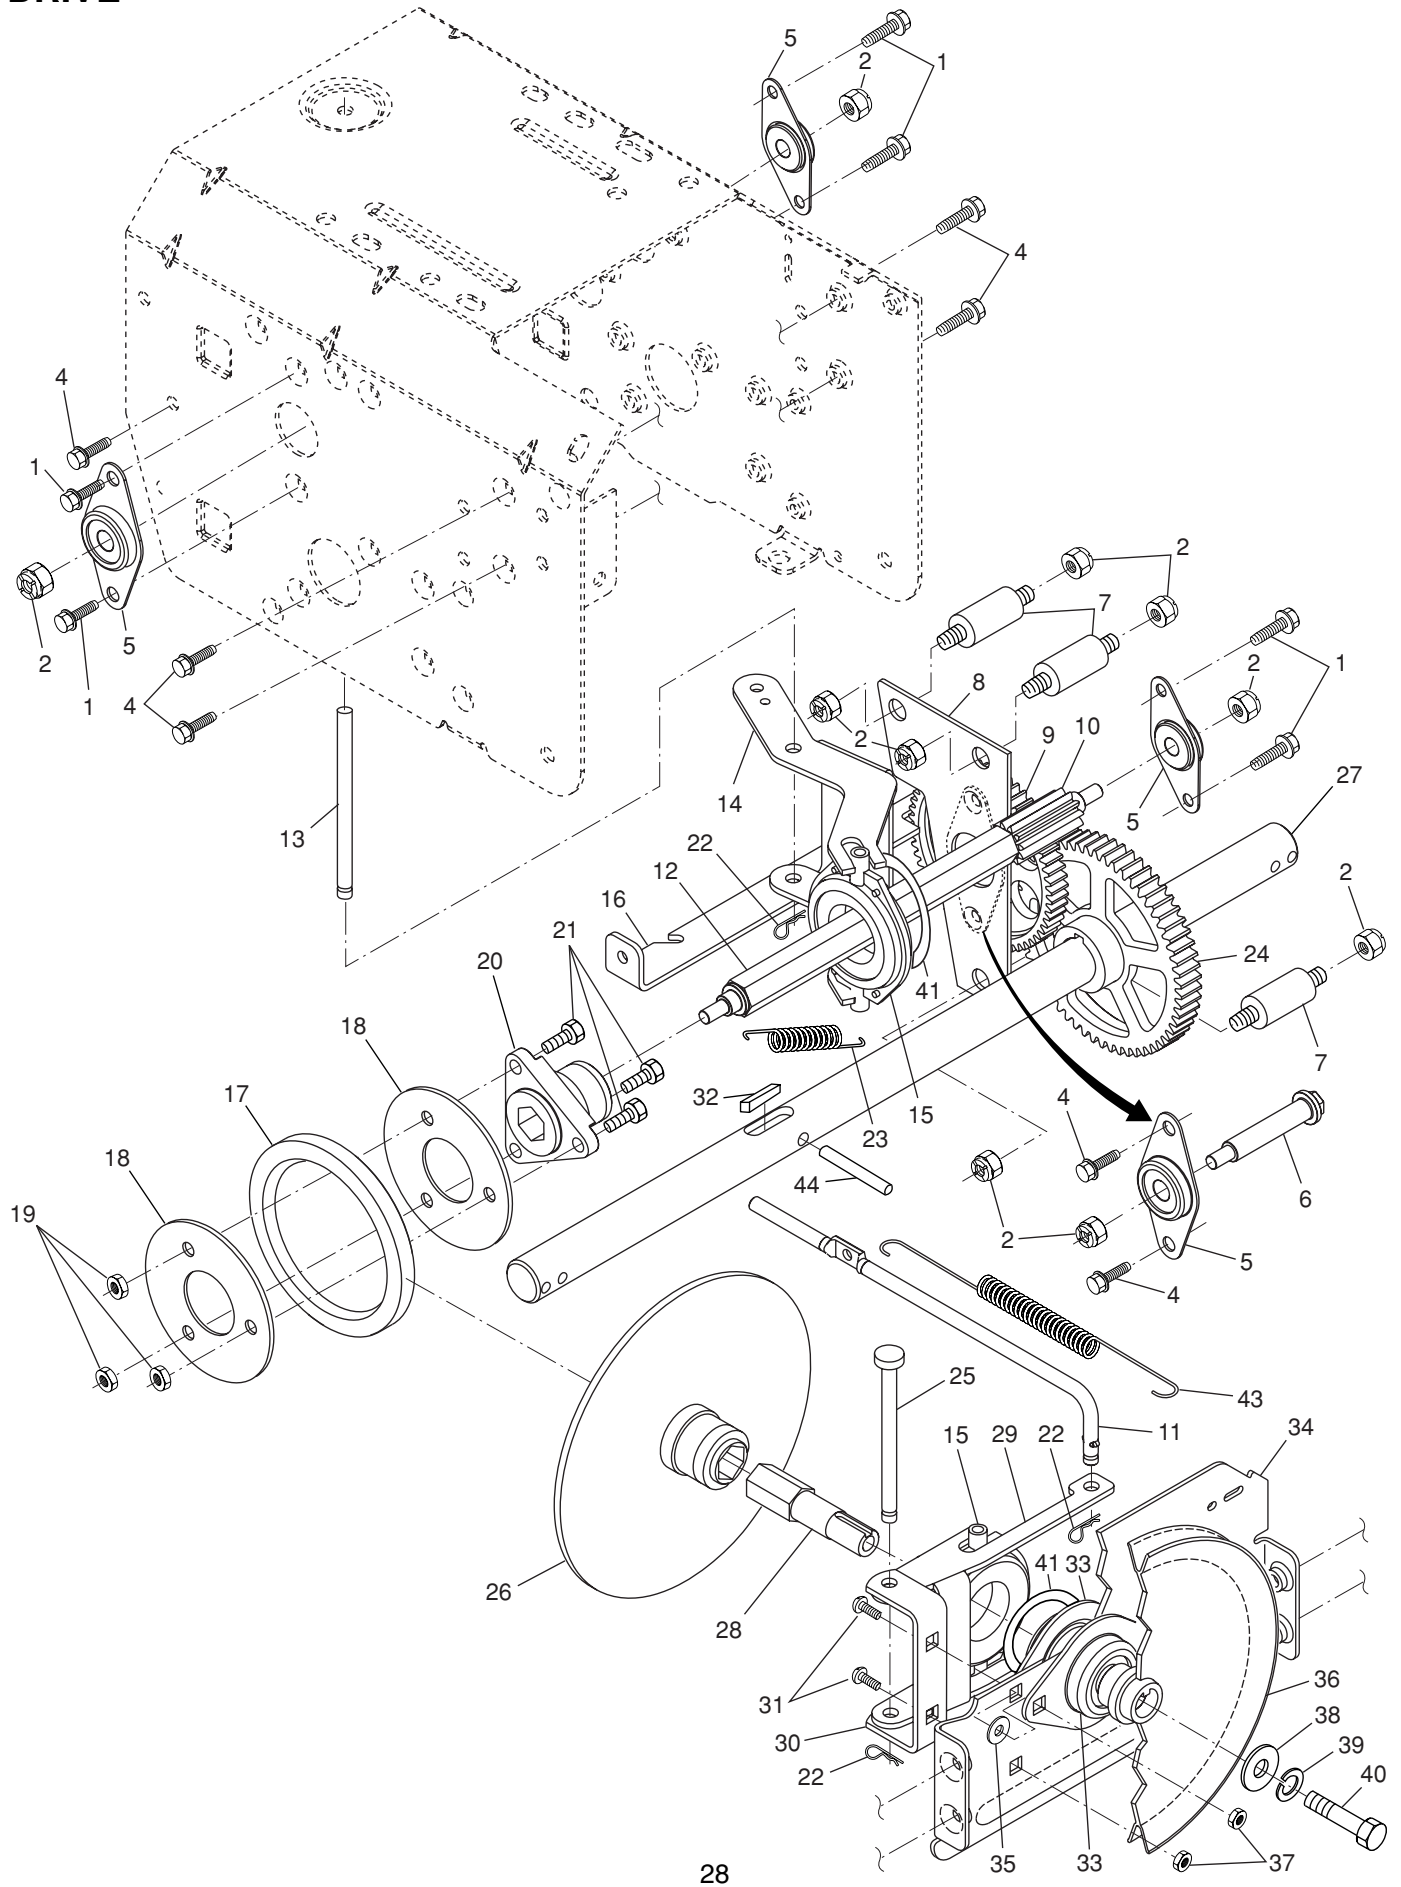



**REPAIR PARTS  
DRIVE**

**SNOW THROWER - - MODEL NUMBER 944.524602**


KEY NO.	PART NO.	DESCRIPTION
1	198584	Screw, Hex Head 5/16-18 x 3/4
2	751153	Nut, Lock 5/16-18
4	198584	Screw, Hex Head 5/16-18 x 1/2
5	180017	Bearing, Flange
6	180134	Shaft, Auxiliary
7	179270	Spacer, Plate
8	192616X479	Plate, Auxiliary
9	180082	Gear, Intermediate (12/58)
10	180065	Gear, Pinion
11	187714	Rod, Clutch
12	180066	Shaft, Long, Hex
13	178807	Pin, Pivot
14	178619X479	Lever, Shifter / Wheel
15	175344	Trunnion Bearing Assembly
16	186951X479	Bracket, Pivot, Shifter
17	179831	Ring, Rubber Wheel
18	198176X479	Plate, Rubber Wheel
19	73930500	Nut, Lock 5/16-18
20	178613	Hub, Rubber Wheel
21	74760514	Screw, Hex Head 5/16-18 x 7/8
22	85179	Retainer, Hairpin
23	180135	Spring, Bias
24	180081	Gear, Axle (58 Teeth)
25	178695	Pin, Pivot Lever
26	197763	Plate Assembly, Drive
27	404307	Shaft, Axle
28	197764	Shaft, Short Hex
29	175350X479	Lever, Shifter Plate
30	175349X479	Bracket, Shifter Support
31	72270505	Bolt, Carriage 5/16-18 x 5/8
32	189282	Key, Square
33	188909	Bearing, Flange
34	175338X479	Plate, Drive Mounting
35	182504	Spacer, Bearing
36	191080	Pulley, Traction Drive
37	198541	Nut, Lock 5/16-18
38	19111507	Washer, Flat
39	10040500	Washer, Lock 5/16
40	74950512	Screw, Hex Head 5/16-18 x 3/4
41	12000012	Ring, Retaining
43	179095	Spring, Return
44	9465M	Pin, Roll

**NOTE:** All component dimensions given in U.S. inches. 1 inch = 25.4 mm  
**IMPORTANT:** Use only Original Equipment Manufacturer (O.E.M.) replacement parts.  
 Failure to do so could be hazardous, damage your snow thrower and void your warranty.

# REPAIR PARTS

# SNOW THROWER - - MODEL NUMBER 944.524602

## CHASSIS / ENGINE / PULLEYS

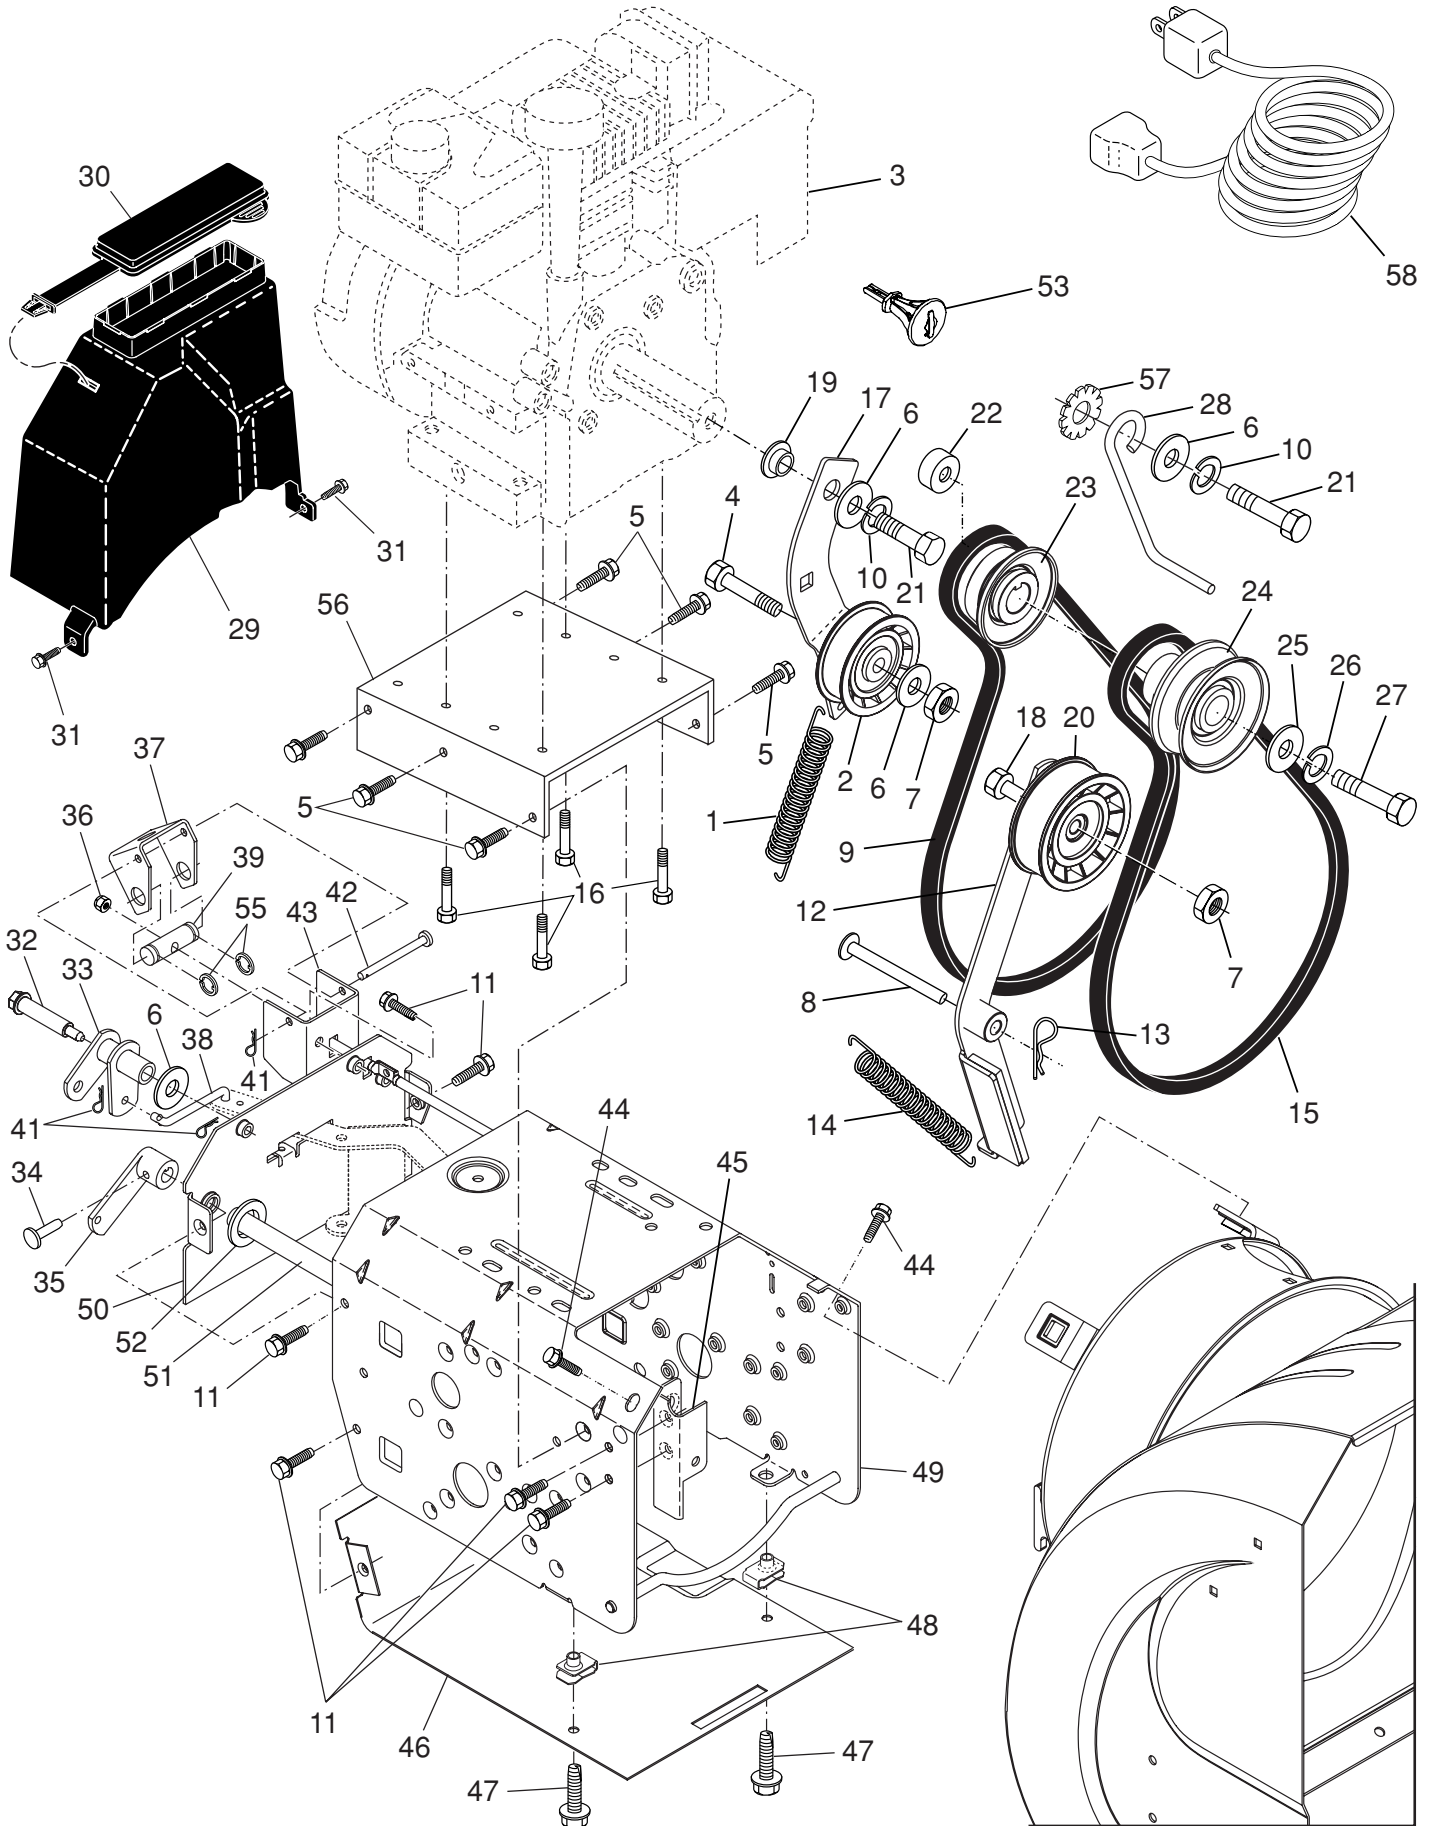

**REPAIR PARTS****SNOW THROWER - - MODEL NUMBER 944.524602****CHASSIS / ENGINE / PULLEYS**


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	181044	Spring, Traction Idler	28	155452	Guide, Belt
2	180552	Pulley, Idler (2-1/4)	29	192213	Belt Cover Assembly (Includes Toolbox Cover)
3	---	Engine, Briggs and Stratton, Model Number 21C314-0738-E1 (See Breakdown)	30	178830	Cover, Toolbox
4	74780520	Screw, Hex Head 5/16-18 x 1-1/4	31	405024	Screw, Hex Head 1/4-20 x 1/2
5	150078	Screw, Hex Washer Head 5/16-18 x 3/4	32	179256	Bolt, Shoulder 5/16-18
6	59289	Washer, Flat	33	187853	Bellcrank Shifter
7	166785	Nut, Jam, Lock 5/16-18	34	198580	Screw, Hex Head 1/4-28 x 3/4
8	175330	Pin, Idler Pivot	35	405485	Arm, Auger Control
9	407908	V-Belt, Traction Drive	36	73800500	Nut, Lock 5/16-18
10	10040500	Washer, Lock 5/16	37	178833X479	Bellcrank Assembly
11	198584	Screw, Hex Washer Head 5/16-18 x 1/2	38	187101	Link, Speed Control
12	179259	Impeller Arm / Pad Assembly	39	192110	Trunnion, Pivot Bracket
13	85179	Retainer, Hairpin	41	700279	Clip, Retainer
14	178828	Spring, Brake	42	179065	Pin, Pivot Bracket
15	408007	V-Belt, Impeller Drive	43	179063X479	Bracket, Bellcrank
16	150406	Screw, Hex Head 3/8-16 x 1-1/4	44	17000616	Screw, Hex Head
17	179354X008	Arm, Idler	45	175324X479	Bracket, Pivot, Idler
18	74780524	Screw, Hex Head 5/16-18 x 1-1/2	46	178624X479	Pan, Frame Bottom
19	198559	Bushing, Idler Pivot	47	71020512	Screw, Hex Head 5/16-18 x 3/4
20	180523	Pulley, Idler (2-3/4)	48	181156	Nut, Speed 5/16-18
21	74610516	Screw, Hex Head 5/16-18 x 1	49	404429X615	Frame Assembly
22	179371	Spacer, Engine Pulley	50	187715X615	Plate, Frame End
23	180478	Pulley, Engine, Traction Drive	51	406109	Shaft, Auger Control
24	179157	Pulley, Engine, Impeller Drive	52	57079	Washer, Hardened
25	400026	Washer, Flat 3/8	55	12000002	E-Ring
26	850263	Washer, Lock 3/8	56	183537X479	Mounting Plate, Engine
27	851084	Screw, Hex Head 3/8-24 x 1-3/8	57	11050500	Washer, Lock, External Tooth
			58	193070	Power Cord

**NOTE:** All component dimensions given in U.S. inches. 1 inch = 25.4 mm

**IMPORTANT:** Use only Original Equipment Manufacturer (O.E.M.) replacement parts. Failure to do so could be hazardous, damage your snow thrower and void your warranty.

# REPAIR PARTS WHEELS

# SNOW THROWER - - MODEL NUMBER 944.524602

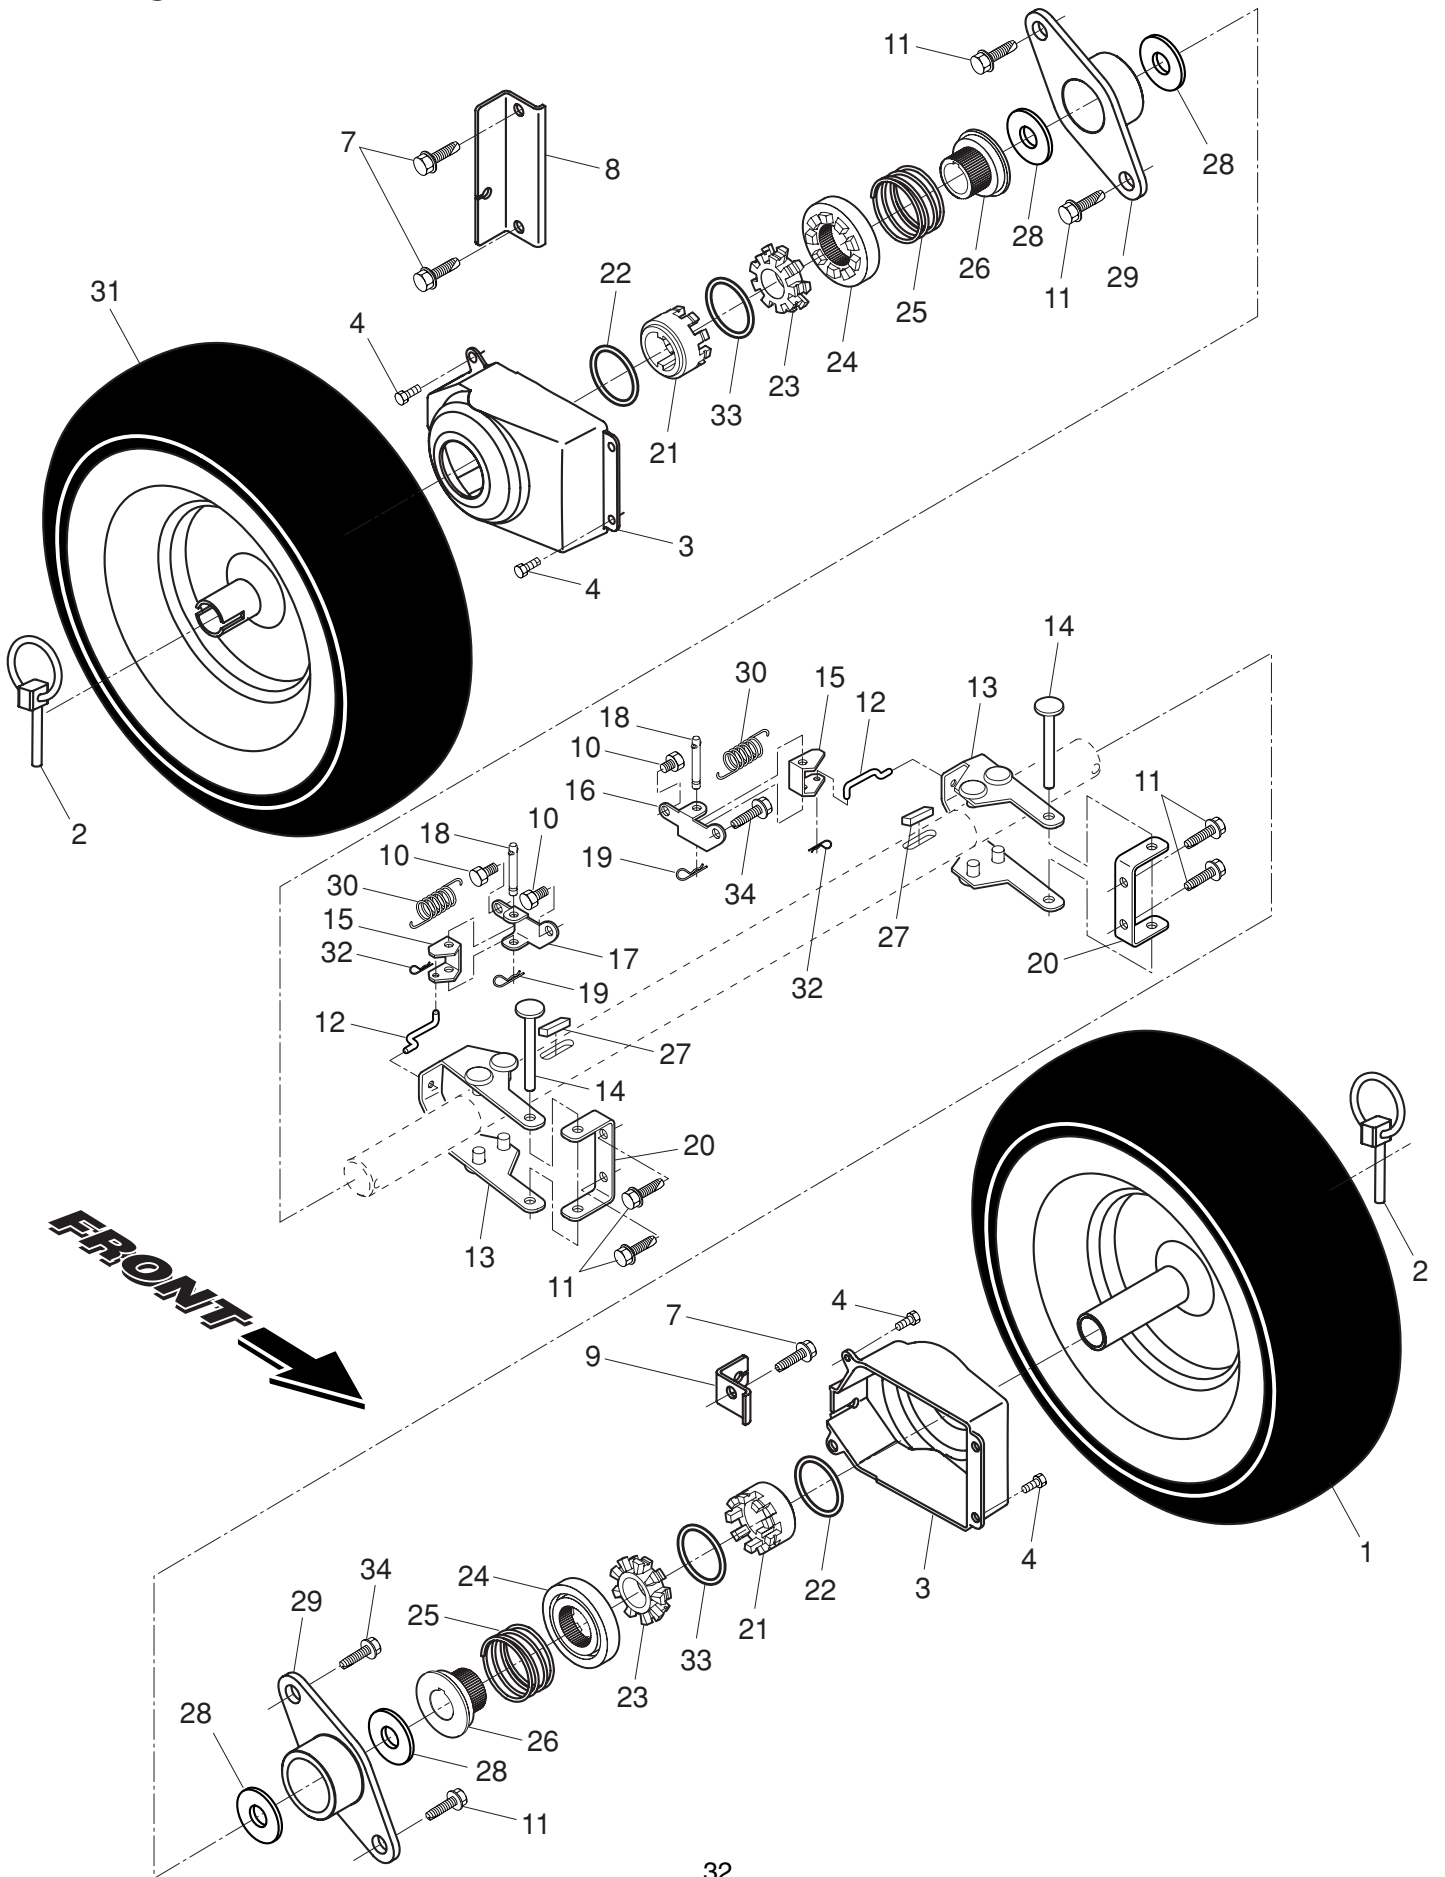

# REPAIR PARTS

## WHEELS


# SNOW THROWER - - MODEL NUMBER 944.524602

KEY NO.	PART NO.	DESCRIPTION
1	196752X417	Wheel Assembly, 16", Power Steering, LH
2	155443	Pin, Klik 1/4
3	405161	Cover, Power Steering
4	184471	Screw, Hex Head #10-24 x 1/2
7	17000616	Capscrew, Hex Head, Flanged 3/8-16 x 1
8	185603X479	Bracket, Steering Cable, RH
9	185602X479	Bracket, Steering Cable, LH
10	17600406	Screw, Hex Head 1/4-20 x 3/8
11	198584	Screw, Hex Head 5/16-18 x 1/2
12	406057	Link, Steering Lever
13	193506X498	Yoke, Steering
14	182015	Pin, Steering Lever
15	194944X008	Bellcrank
16	194939X008	Bracket, LH Steering
17	194943X008	Bracket, RH Steering
18	181847	Pin, Steering Bellcrank
19	85179	Retainer, Hairpin
20	179148X479	Bracket, Steering
21	192126	Driver, Wheel
22	182466	Ring, Wire Retainer
23	187622	Lobe, Wheel
24	194941	Slide, Clutch
25	179139	Spring, Clutch Slide
26	194940	Lobe, Axle
27	189282	Key, Square 1/4 x .875
28	174697	Washer, Thrust (1")
29	179830	Bearing, Axle
30	193885	Spring, Return, Steering Latch
31	196753X417	Wheel Assembly, 16", Power Steering, RH
32	700279	Clip, Retainer
33	12000045	Ring, Retaining
34	146315	Screw, Hex Head, Tapping 5/16-18 x 5/8

**NOTE:** All component dimensions given in U.S. inches. 1 inch = 25.4 mm  
**IMPORTANT:** Use only Original Equipment Manufacturer (O.E.M.) replacement parts.  
 Failure to do so could be hazardous, damage your snow thrower and void your warranty.

**REPAIR PARTS  
DECALS**


**SNOW THROWER - - MODEL NUMBER 944.524602**

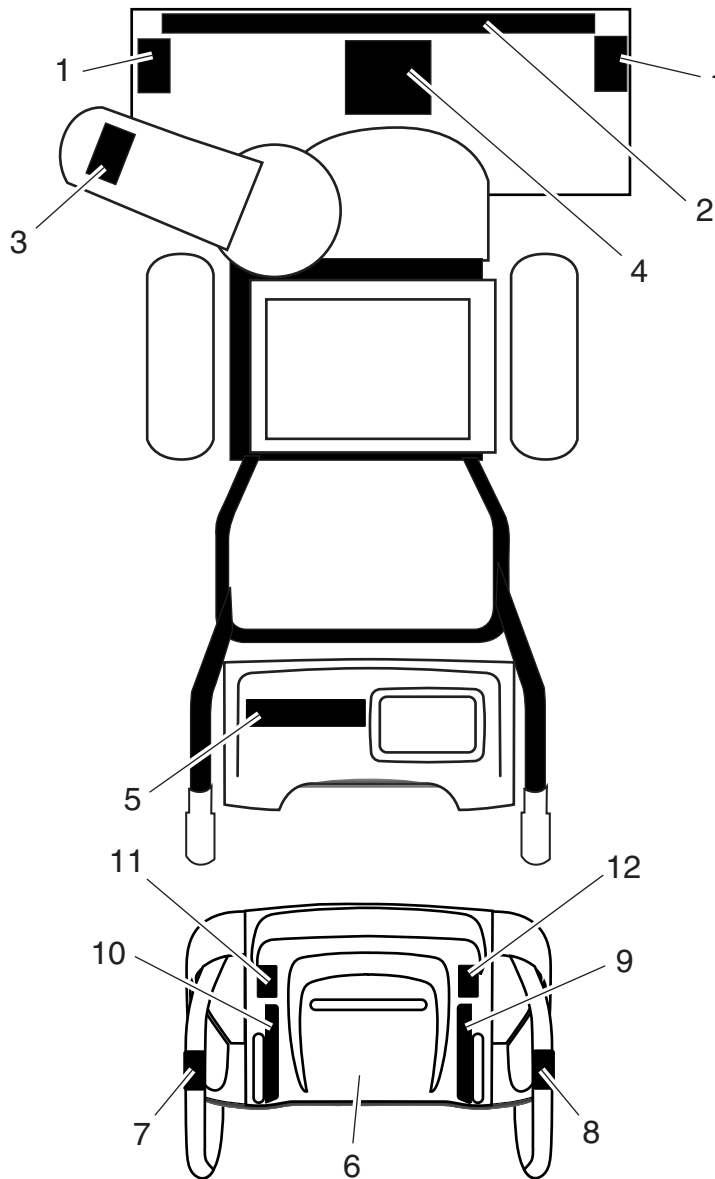


KEY NO.	PART NO.	DESCRIPTION
1	181037	Decal, Danger
2	192175	Decal, Craftsman, 11.5HP/30"
3	181035	Decal, Danger, Deflector
4	181042	Decal, Danger
5	183876	Decal, Craftsman
6	181033	Decal, Instruction
7	155798	Decal, Traction Lever
8	155800	Decal, Auger Lever
9	181039	Decal, Speed Control
10	183730	Decal, Remote Deflector
11	183907	Decal, LH Trigger
12	183905	Decal, RH Trigger
--	407798	Owner's Manual, English
--	407800	Owner's Manual, French

**NOTE:** All component dimensions given in U.S. inches. 1 inch = 25.4 mm  
**IMPORTANT:** Use only Original Equipment Manufacturer (O.E.M.) replacement parts.  
 Failure to do so could be hazardous, damage your snow thrower and void your warranty.



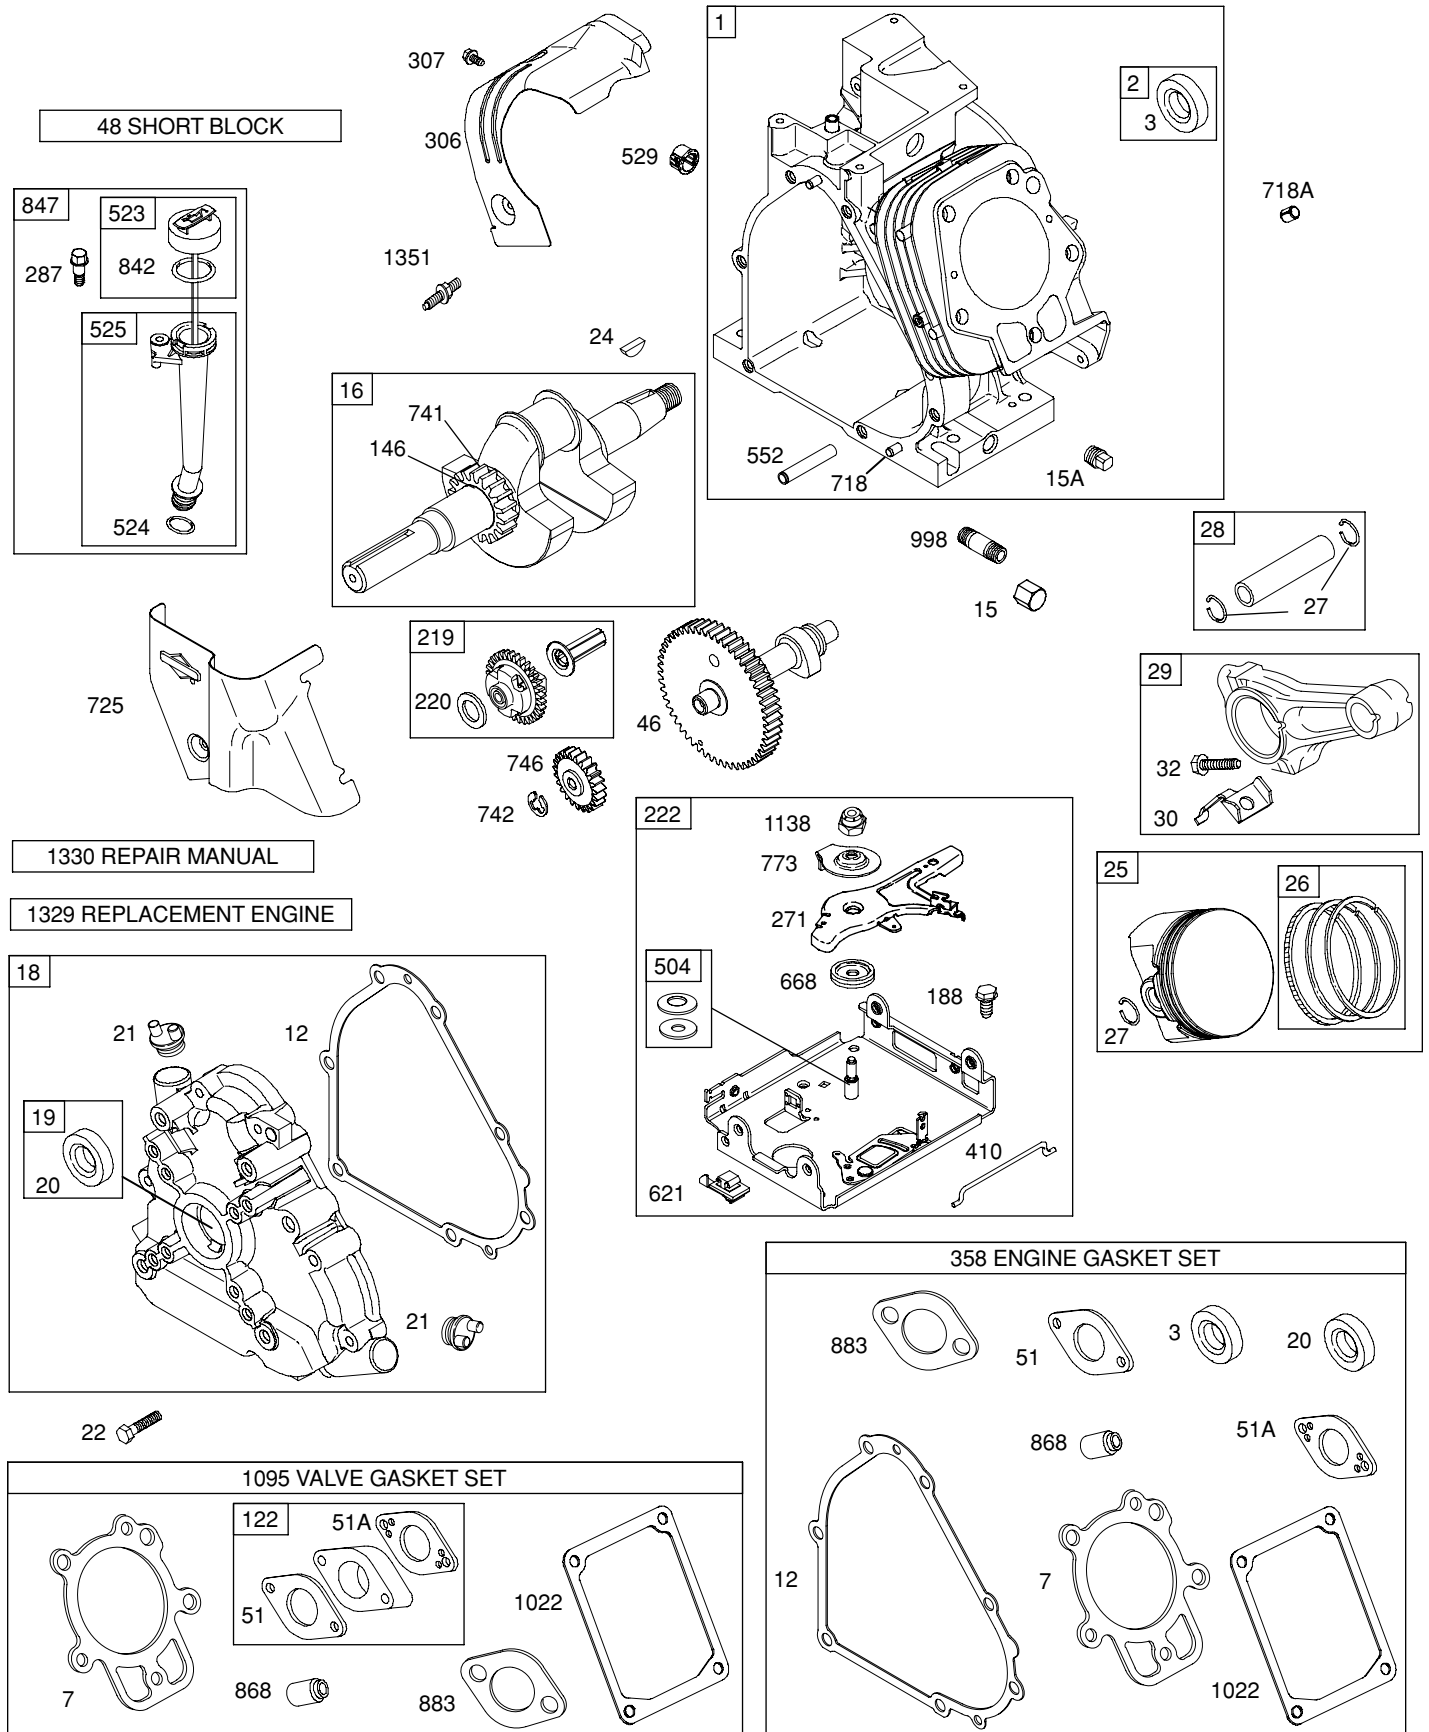



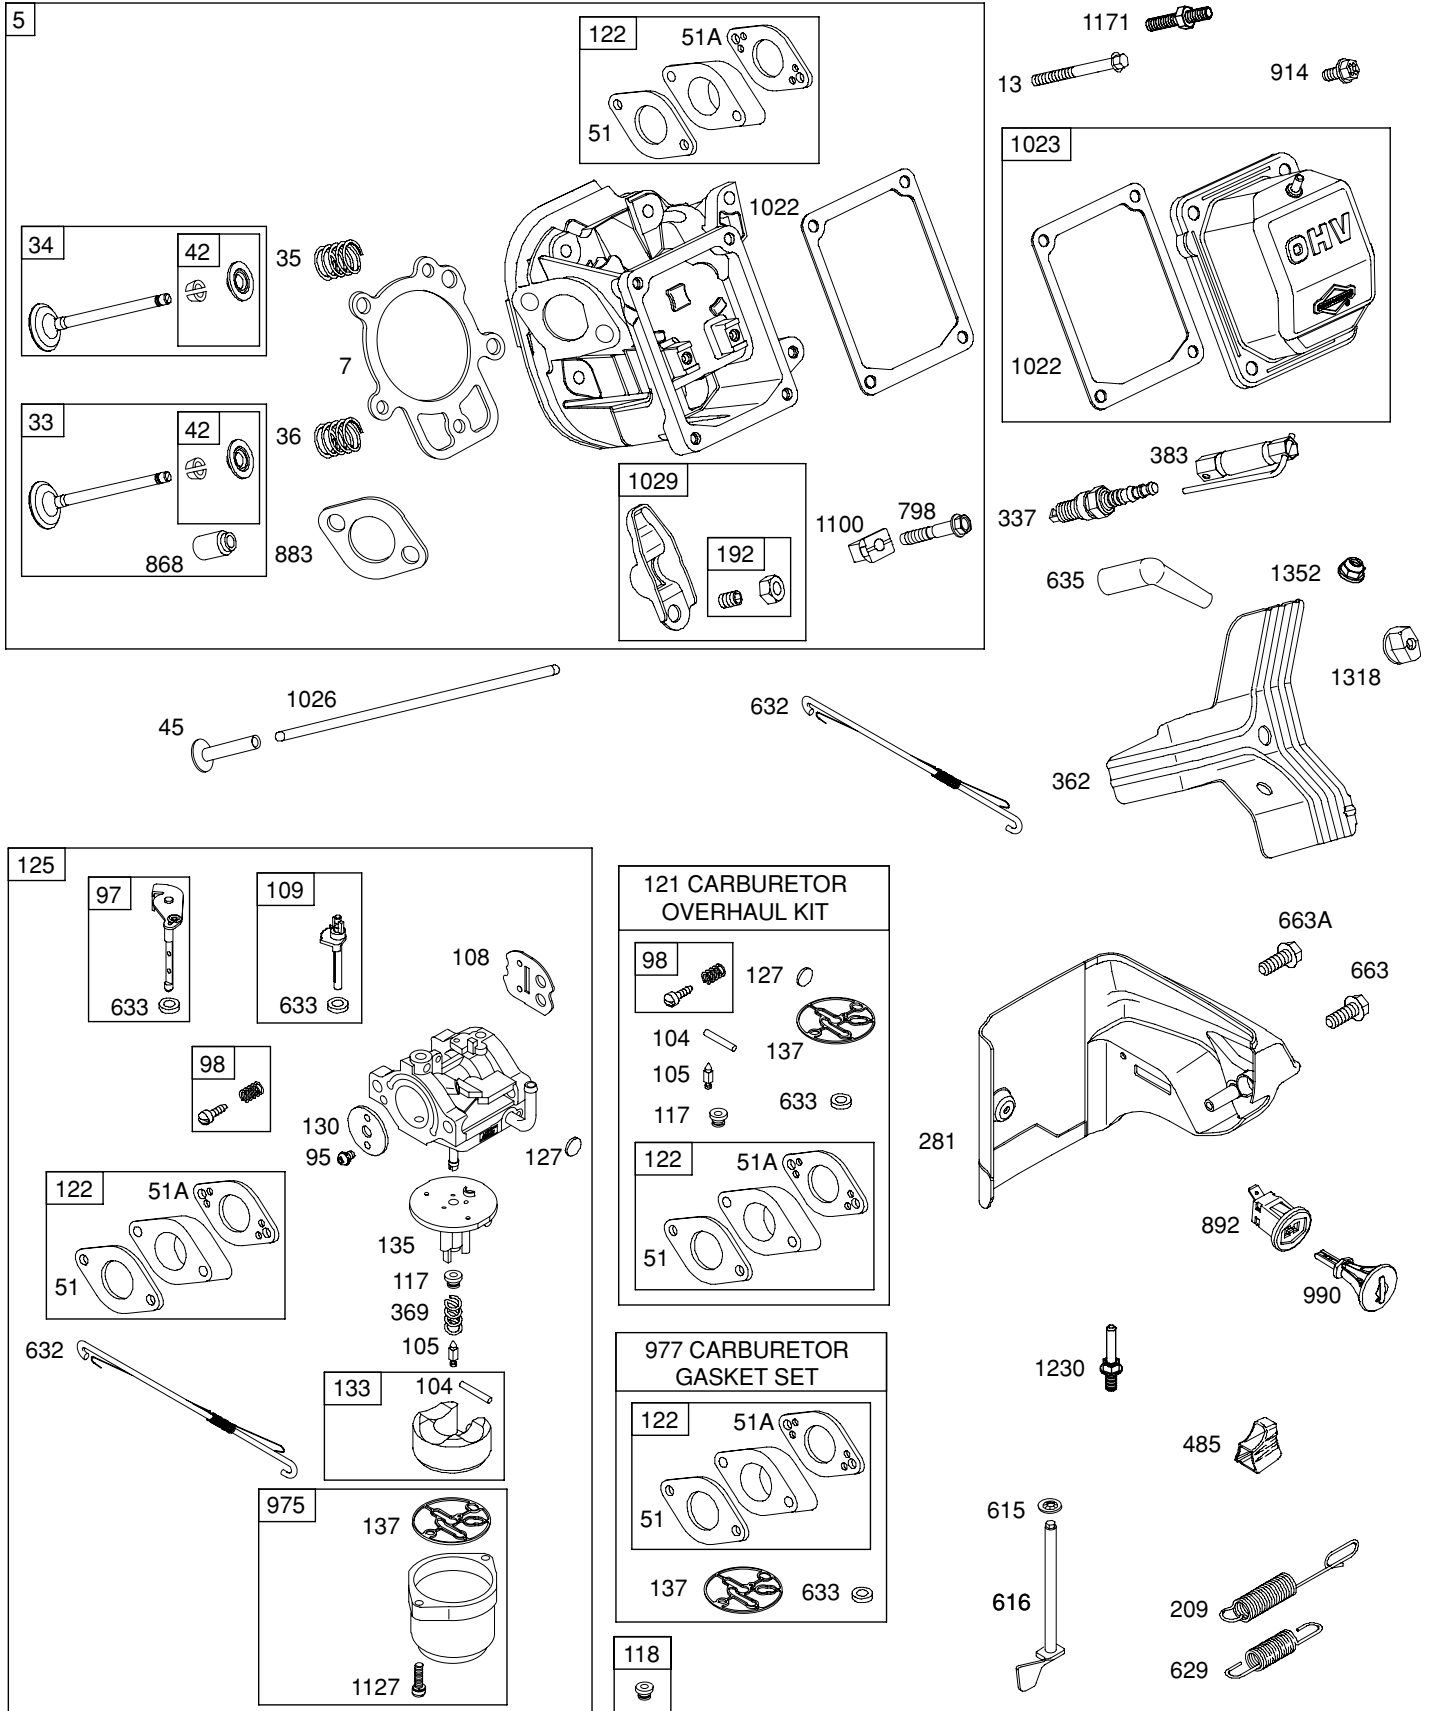

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	790038	Cylinder Assembly	109	696735	Shaft-Choke
2	697719	Kit-Bushing/Seal (Magneto Side)	117	696134	Ø Jet-Main (Standard)
3	391086	• Seal-Oil (Magneto Side)	118	696135	Ø Jet-Main (High Altitude)
5	793309	Head-Cylinder	121	696146	Kit-Carburetor Overhaul
7	697690	•+ Gasket-Cylinder Head	122	694876	+ Ø‡ Spacer-Carburetor
11	696750	Tube-Breather	125	696737	Carburetor
12	694953	• Gasket-Crankcase	127	690727	Ø Plug-Welch
13	690360	Screw (Cylinder Head)	130	696139	Valve-Throttle
15	695757	Plug-Oil Drain	133	694914	Float-Carburetor
15A	691686	Plug-Oil Drain	135	696142	Tube-Fuel Transfer
16	696412	Crankshaft	137	695426	Ø‡ Gasket-Float Bowl
18	791965	Cover-Crankcase	146	690979	Key-Timing
19	698340	Kit-Bushing/Seal (PTO Side)	187	791766	Line-Fuel (Cut to Required Length)
20	391086	• Seal-Oil (PTO Side)	187A	695429	Line-Fuel
21	281658	Cap-Oil Fill	188	690877	Screw (Control Bracket)
22	695174	Screw (Crankcase Cover/Sump)	190	692127	Screw (Fuel Tank)
23	695485	Flywheel	192	690083	Adjuster-Rocker Arm
24	222698	Key-Flywheel	209	694867	Spring-Governor
25	791819	Piston Assembly (Standard)	219	693578	Gear-Governor
	791818	Piston Assembly (.020" Oversize)	220	691724	Washer (Governor Gear)
26	697692	Ring Set (Standard)	222	698034	Bracket-Control
	697698	Ring Set (.020" Oversize)	227	694864	Lever-Governor Control
27	690975	Lock-Piston Pin	271	698035	Lever-Control
28	696581	Pin-Piston	281	697400	Panel-Control
29	694691	Rod-Connecting	287	691693	Screw (Dipstick Tube)
30	694692	Dipper-Connecting Rod	300	699222	Muffler
32	690976	Screw (Connecting Rod)	304	697469	Housing-Blower
33	499596	Valve-Exhaust	305	691108	Screw (Blower Housing)
34	792200	Valve-Intake	306	697240	Shield-Cylinder
35	694865	Spring-Valve (Intake)	307	691660	Screw (Cylinder Shield)
36	694865	Spring-Valve (Exhaust)	309	698112	Motor-Starter
42	499586	Keeper-Valve	332	694685	Nut (Flywheel)
45	690977	Tappet-Valve	333	492341	Armature-Magneto
46	790958	Camshaft	334	691061	Screw (Magneto Armature)
48	- - -	Short Block	337	491055	Plug-Spark
51	694874	•+Ø‡ Gasket-Intake	356	793206	Wire-Stop
51A	694875	•+Ø‡ Gasket-Intake	358	695438	Gasket Set-Engine
53	696753	Stud (Carburetor)	362	698041	Shield-Spark Plug
55	696710	Housing-Rewind Starter	369	695422	Spring-Float Bowl
58	693389	Rope-Starter (Cut to Length)	383	19374	Wrench-Spark Plug
60	695740	Grip-Starter Rope	410	695382	Link-Control
65	697725	Screw (Rewind Starter)	455	697226	Cup-Flywheel
95	690718	Screw (Throttle Valve)	456	692299	Plate-Pawl Friction
97	696387	Shaft-Throttle	459	281505	Pawl-Ratchet
98	695408	Ø Kit-Idle Speed	472	696752	Knob-Choke Shaft
104	694918	Ø Pin-Float Hinge	474	791743	Alternator
105	696136	Ø Valve-Float Needle	485	695755	Knob-Control
108	696736	Valve-Choke	504	695383	Washer Set-Friction

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
505	691251	Nut (Governor Control Lever)	883	695398	•+ Gasket-Exhaust
523	695344	Dipstick	892	696749	Switch-Key
524	691876	Seal-O Ring (Dipstick Tube)	914	693732	Screw (Rocker Cover)
525	695343	Tube-Dipstick	930	696709	Guard-Rewind
528	696751	Hose-Primer	957	698109	Cap-Fuel
529	791822	Grommet	958	698180	Valve-Fuel Shut Off
552	694674	Bushing-Governor Crank	972	694260	Tank-Fuel
562	691119	Bolt (Governor Control Lever)	975	696138	Bowl-Float
564	696692	Screw (Control Cover)	976	790221	Primer-Carburetor
592	690800	Nut (Rewind Starter)	977	696147	Gasket Set-Carburetor
597	691696	Screw (Pawl Friction Plate)	990	695756	Key Set
601	791850	Clamp-Hose	998	792928	Pipe-Oil
604	696758	Cover-Control	1005	694684	Fan-Flywheel
608	699335	Starter-Rewind	1022	690971	•+ Gasket-Rocker Cover
613	695312	Screw (Muffler)	1023	698042	Cover-Rocker
613A	696705	Screw (Muffler)	1026	695177	Rod-Push
615	694676	Retainer-Governor Shaft	1029	690972	Arm-Rocker
616	694675	Crank-Governor	1036	- - -	Label-Emissions (available from an authorized Briggs & Stratton dealer)
621	692310	Switch-Stop	1070	791680	Screw (Flywheel Fan)
629	695307	Spring-Throttle Return	1095	695440	Gasket Set-Valve
632	695917	Spring/Link-Mechanical Governor	1100	791959	Pivot-Rocker Arm
633	690998	∅‡ Seal-Choke/Throttle Shaft	1119	691183	Screw (Alternator)
635	710901	Boot-Spark Plug	1127	695407	Screw (Float Bowl)
663	696685	Screw (Control Panel)	1138	694255	Nut (Control Bracket)
663A	696704	Screw (Control Panel)	1171	696754	Stud (Rocker Arm Cover)
668	694257	Spacer(Control Bracket)	1210	498144	Pulley/Spring Assembly (Pulley)
676	697816	Deflector, Muffler	1211	498144	Pulley/Spring Assembly (Spring)
697	691660	Screw (Muffler Deflector)	1230	696747	Stud (Control Bracket)
689	691855	Spring-Friction	1251	696762	Shield-Snow
697	698113	Screw (Starter Motor)	1252	691108	Screw (Snow Shield)
718	690959	Pin-Locating	1288	696757	Nut (Snow Hood)
718A	695178	Pin-Locating	1318	698111	Knob-Snow Hood
725	696756	Shield-Heat	1329	21B414-0017	Replacement Engine
727	697465	Cover-Starter Drive	1330	275964	Repair Manual
731	790222	Hood-Snow	1351	790017	Stud (Cylinder Shield)
732	691097	Screw (Starter Drive Cover)	1352	790026	Nut (Spark Plug Shield)
741	691288	Gear-Timing			
742	692564	Retainer-E Ring			
746	694679	Gear-Idler			
773	694258	Retainer			
798	697890	Screw (Rocker Cover)			
832	699223	Guard-Muffler			
836	691003	Screw (Muffler Guard)			
842	691031	Seal-O Ring (Dipstick)			
847	695342	Dipstick/Tube Assembly			
851	692424	Terminal, Spark Plug			
868	690968	•+ Seal-Valve			

• Included in Engine Gasket Set, Key Number 358

∅ Included in Carburetor Overhaul Kit, Key Number 121

‡ Included in Carburetor Gasket Set, Key Number 977

+ Included in Valve Gasket Set, Key Number 1095

**NOTE:** All component dimensions given in U.S. inches.  
1 inch = 25.4 mm

# Get it fixed, at your home or ours!

Just Call:

**1-800-4-MY-HOME<sup>®</sup>**

(1-800-469-4663)

24 hours a day, 7 days a week

For the repair of major brand appliances **in your own home...**  
no matter who made it, no matter who sold it!

For your nearest **Sears Parts and Service** location,  
to bring in products like vacuums, lawn equipment and electronics.

For **Sears Parts & Service**, to order the replacement parts,  
accessories and owner's manuals that you need to do-it-yourself.

[www.sears.ca](http://www.sears.ca)

---

To purchase or inquire about a Sears Maintenance Agreement, call:

**1-800-361-6665**

9 a.m. – 11 p.m. Mon. – Fri., EST, 9 a.m. – 4 p.m. Sat.

---

Pour service en français:

**1-800-LE-FOYER<sup>MC</sup>**

(1-800-533-6937)

[www.sears.ca](http://www.sears.ca)



02488

® / ™ Trademarks of Sears, Roebuck and Co. used under license by Sears Canada

<sup>MD</sup> Marque déposée / <sup>MC</sup> Marque de commerce de Sears, Roebuck and Co. utilisée en vertu d'une licence de Sears Canada